



View From Coil Side
Manual Operation

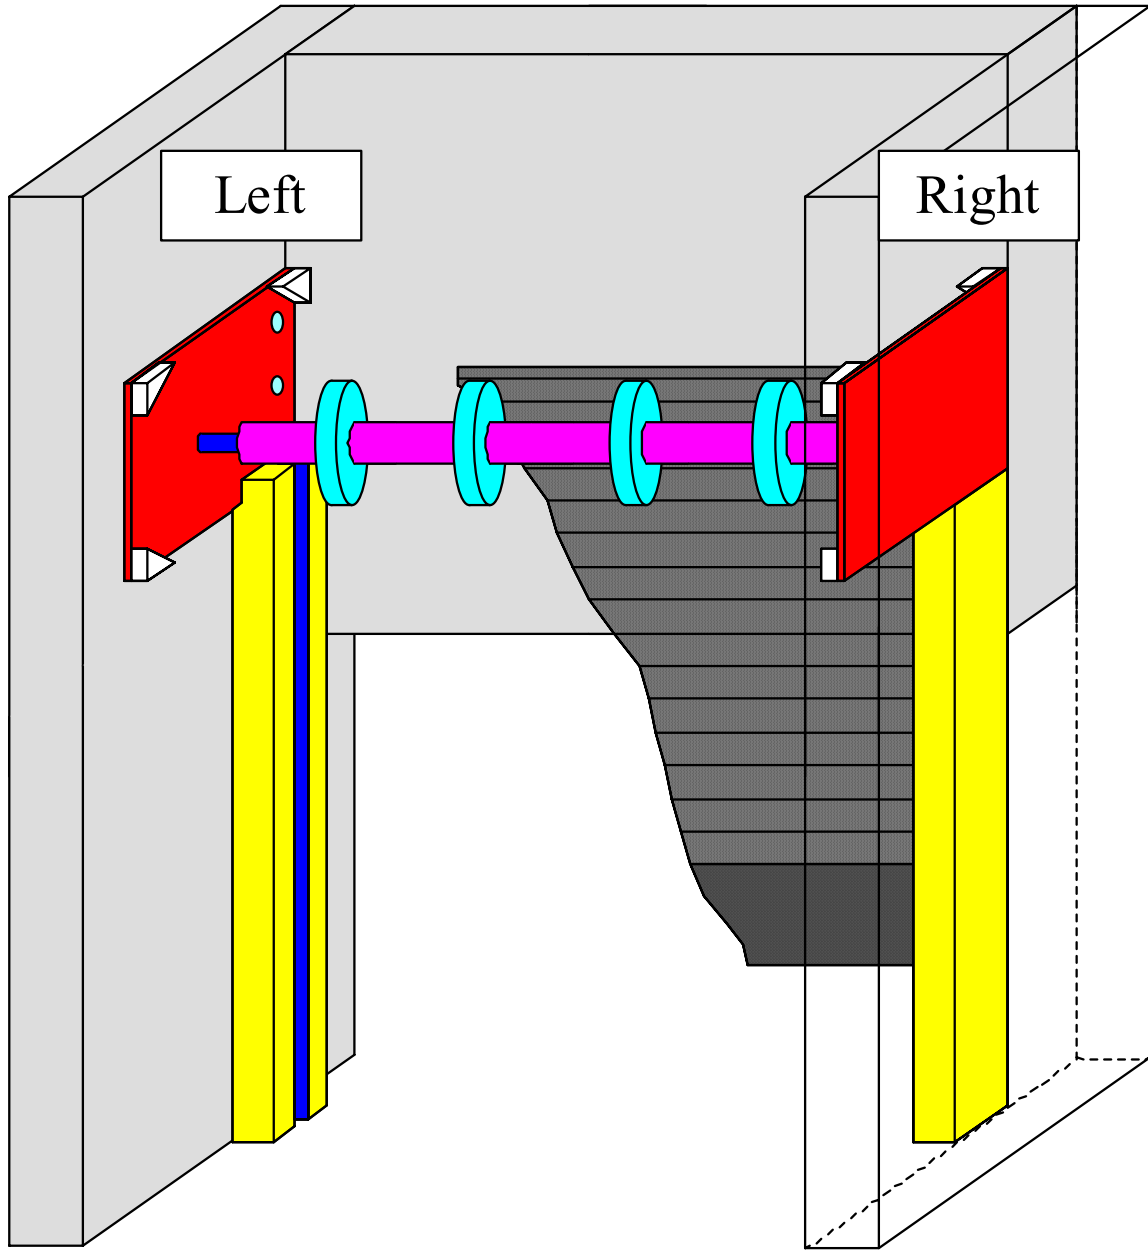

Between Wall Mount
On Face of Lintel
(Shown Without Hood)

Between Wall Mount on Face of Lintel




View From Coil Side
Motor or Crank Operation

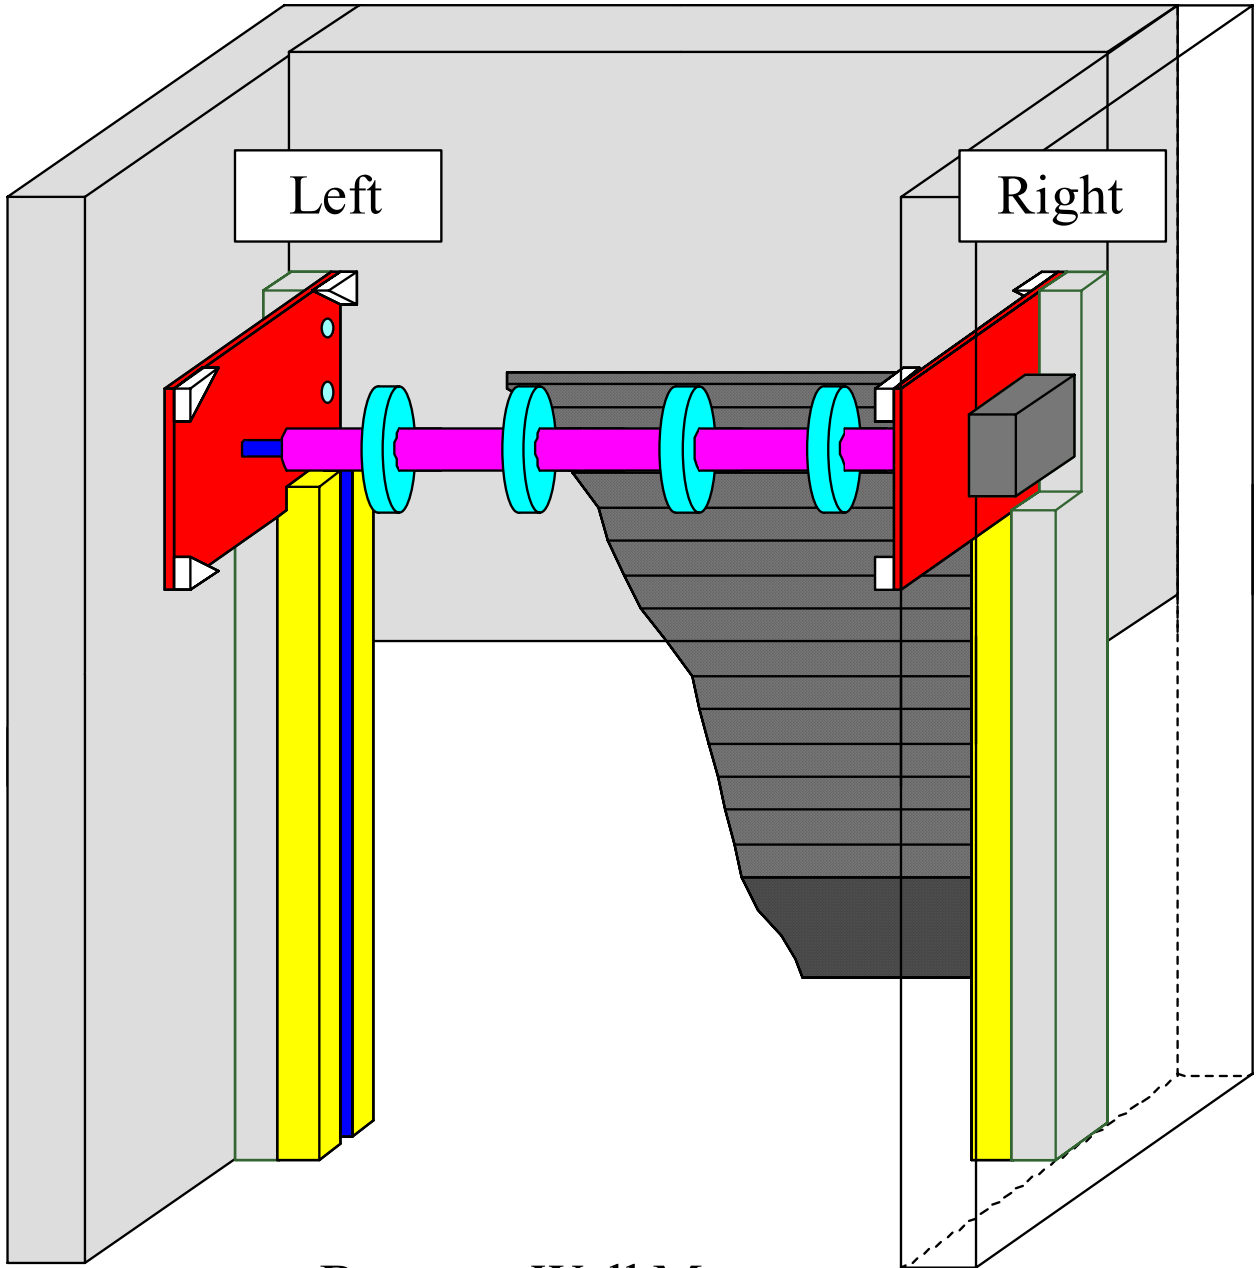




Between Wall Mount
On Face of Lintel With Pack Outs
(Shown Without Hood)

Between Wall Mount on Face of Lintel




End Plate Detail With Hood

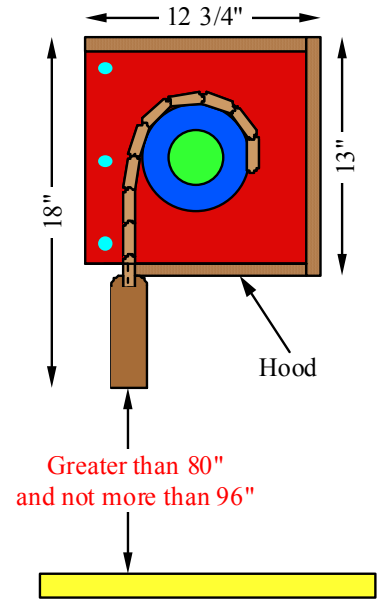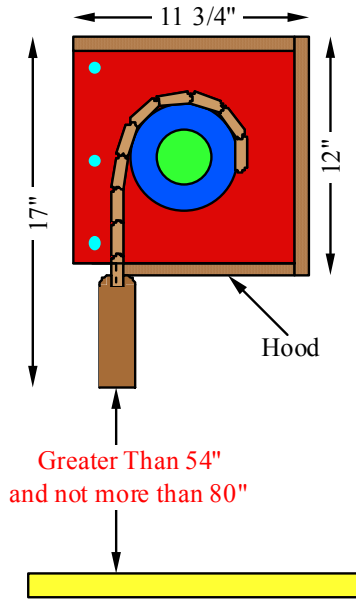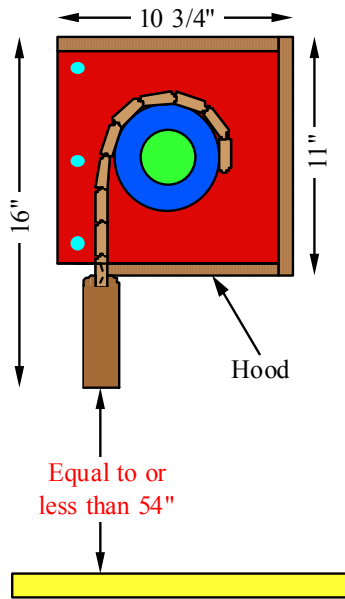

End Plate Detail Without Hood

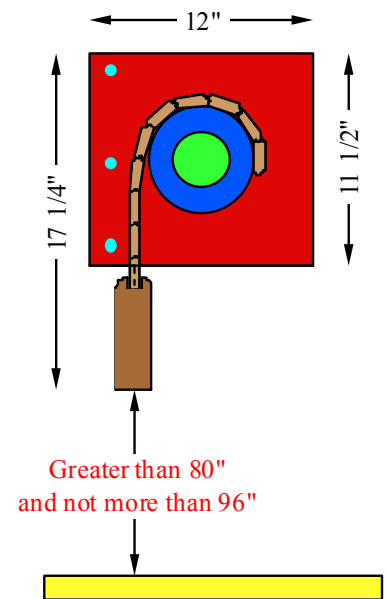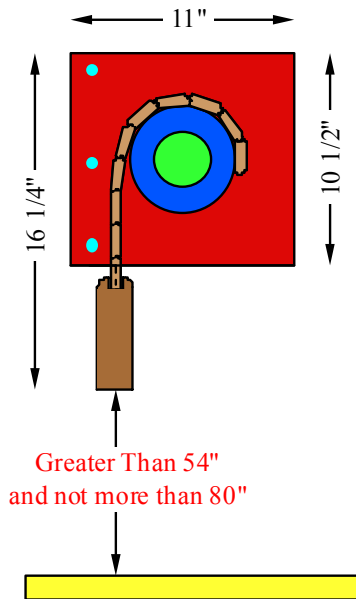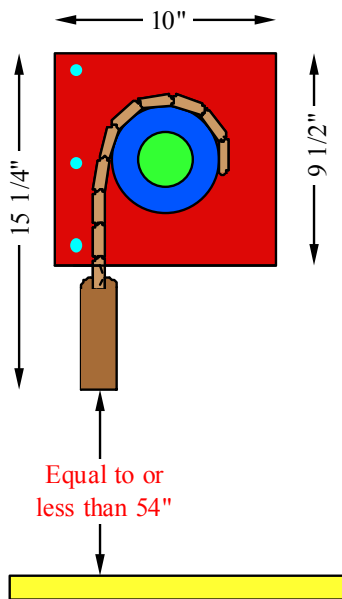

Between Wall Mount on Face of Lintel



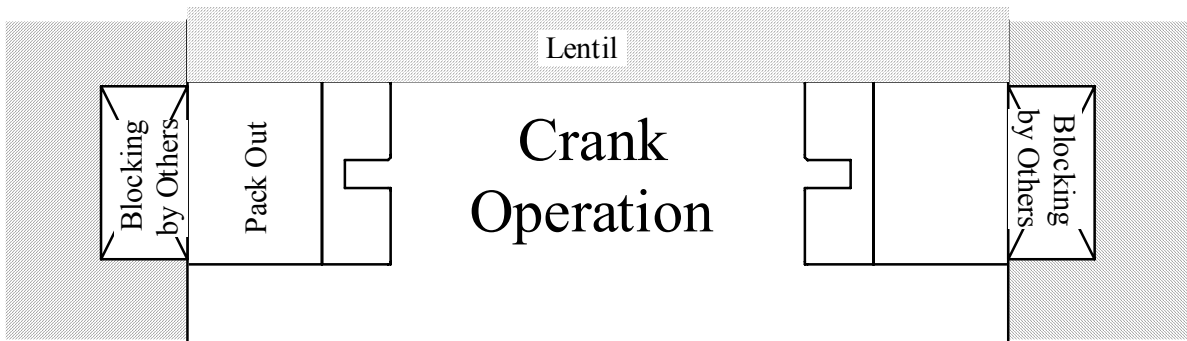
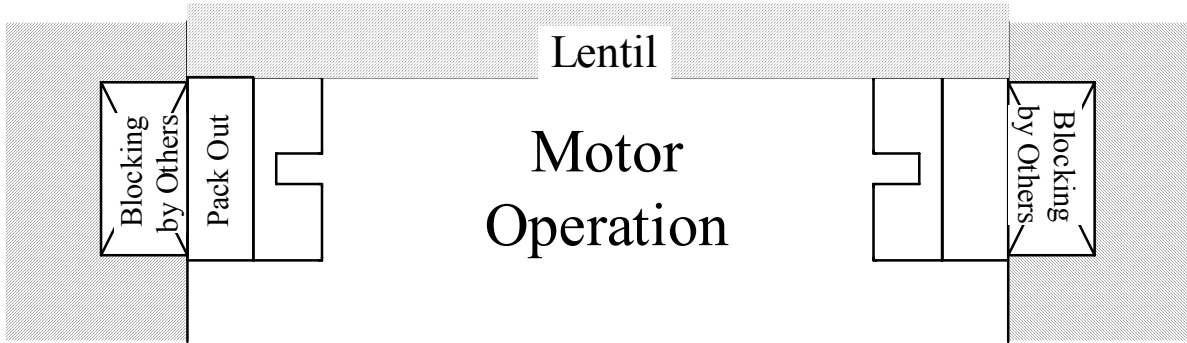
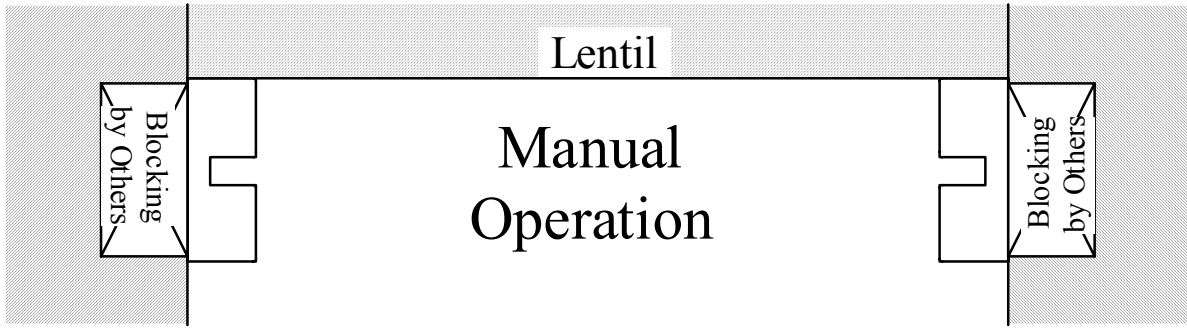


Left

Coil Side

Right

Between Wall Mount on Face of Lintel

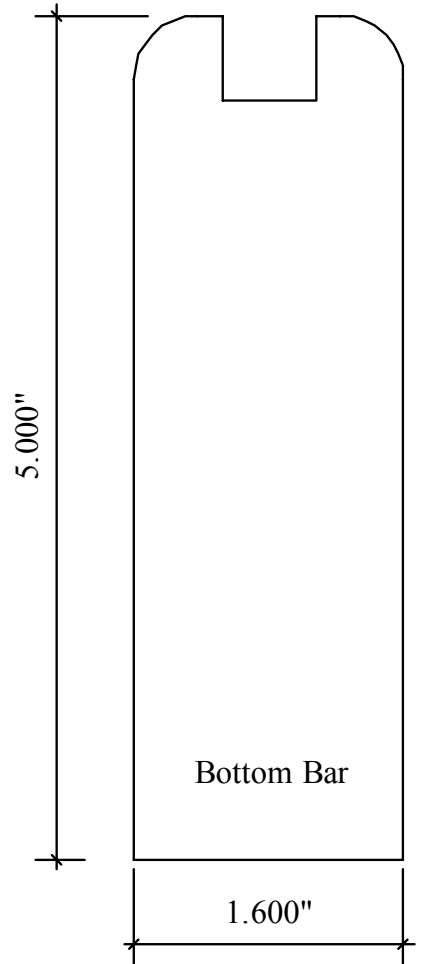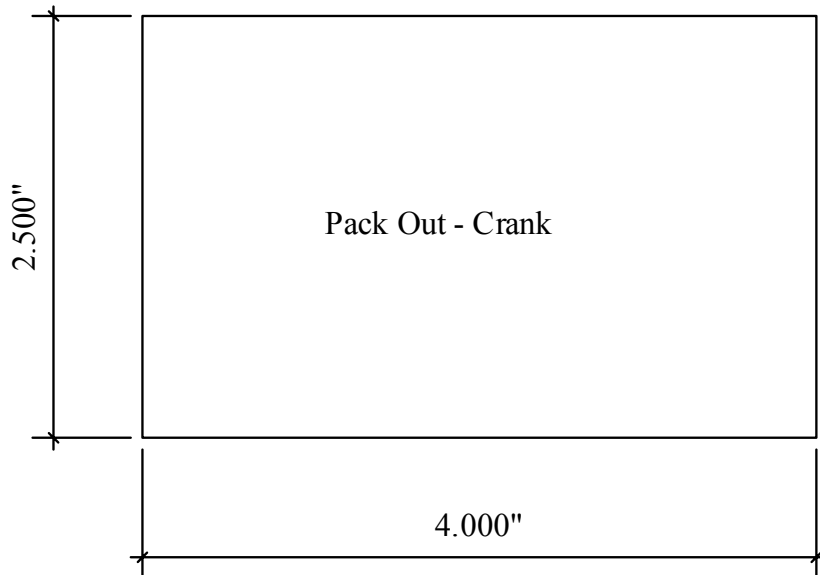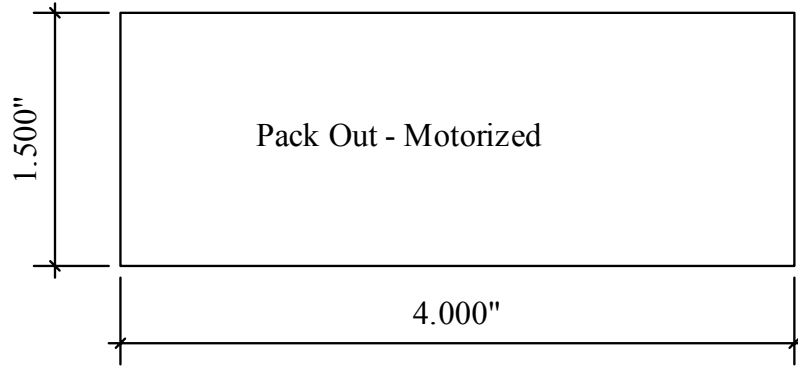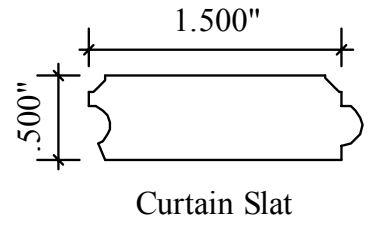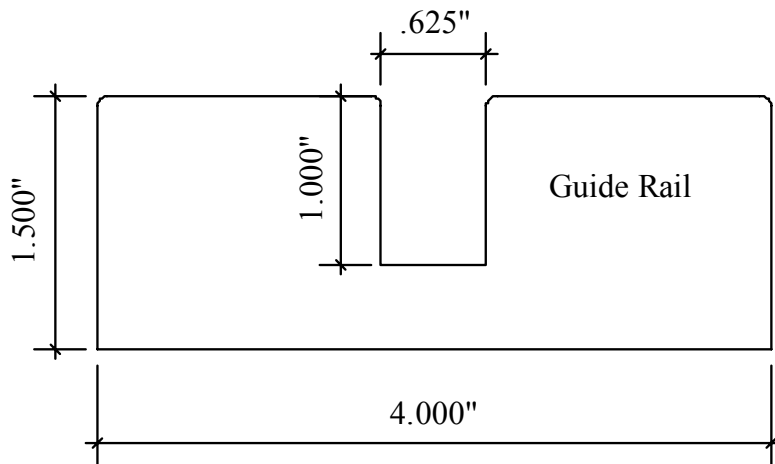

Between Wall Mount on Face of Lintel